
PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!

ITEM#: 13725

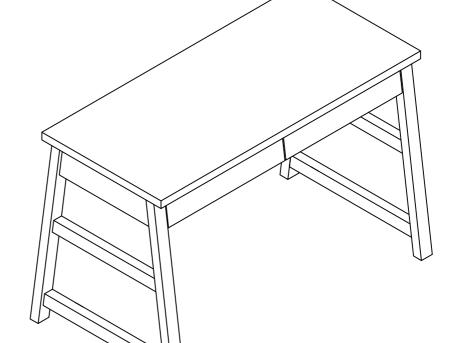


Need some help? Scan here for assembly video.



VERSION: 20161102 PAGE: 1 OF 6

PARTS IDENTIFICATION

ITEM#: 13725

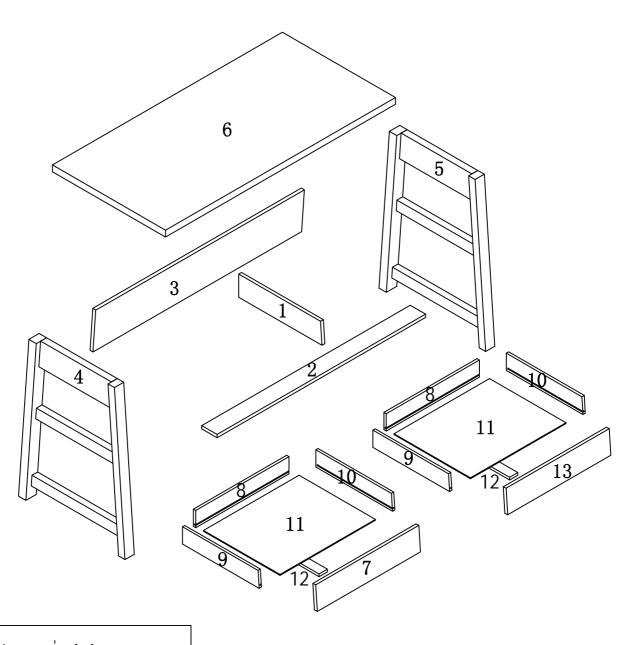

(1)	1pc	(8)	2pcs
(2)	1pc	(9)	2pcs
(3)	1pc	(10)	2pcs
(4)	1pc	(11)	2pcs
(5)	1pc	(12)	2pcs
(6)	1pc	(13)	1pc
(7)	1nc	1	

PAGE: 2 OF 6


HARDWARE IDENTIFICATION

ITEM#: 13725

L			
A	(%)	Ø4 x 25	4pcs
В		L29	19pcs
С		ø15	19pcs
D	**************************************	Ø4 x 30	8pcs
E		Ø8 x 25	13pcs
F	00	Ø20	2pcs
G		L=20	8pcs
Н		Ø12	8pcs
	Saturation	Ø4 x 40	2pcs
J		Ø6 x 30	4pcs
K	b	Ø16	4pcs
		Glue: For securing please apply to wood dowel first before inserting into panel	1pc
HOW TO Cam Bolt			180°
Cam Lock	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	Gently turn Cam Lock clockwise to lock position.


PAGE: 3 OF 6

ITEM#: 13725

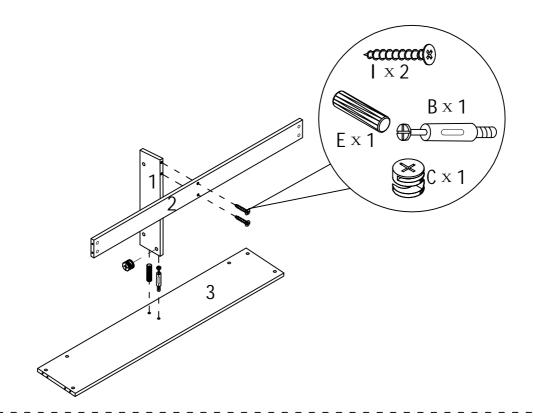


STEP1



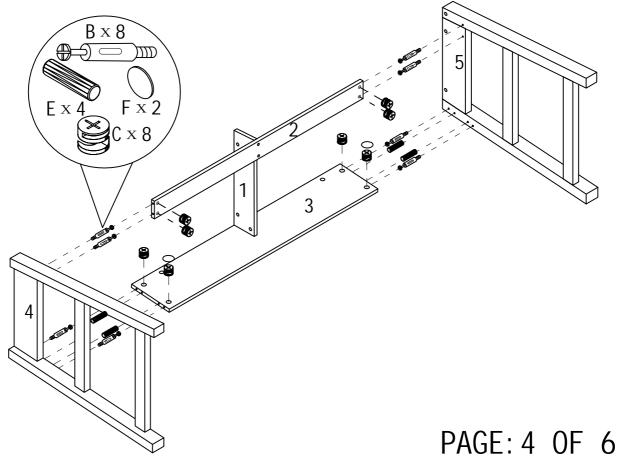


ITEM#: 13725

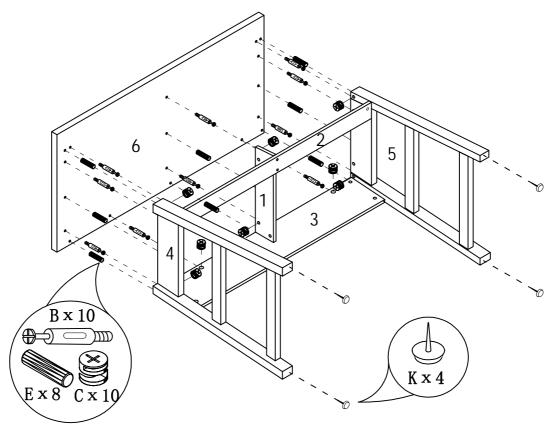


STEP3

STEP4

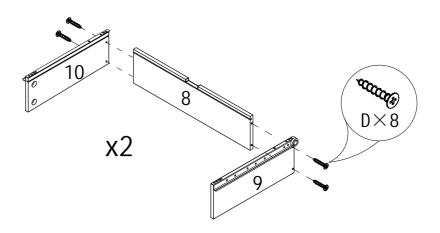


STEP5

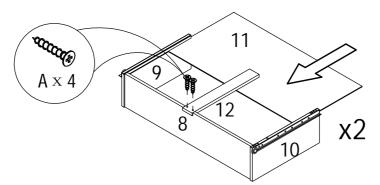


PAGE: 5 OF 6

ITEM#: 13725

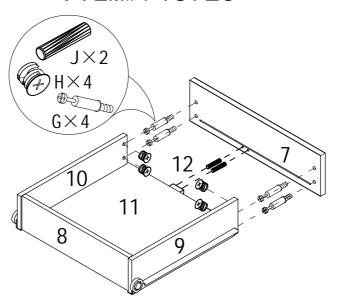



STEP6

STEP7

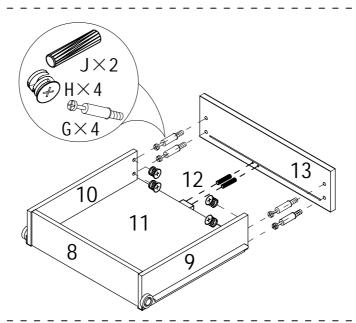

STEP8

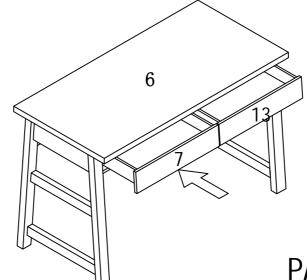

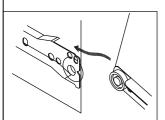

PAGE: 6 OF 6