
ITEM#:192532 CT

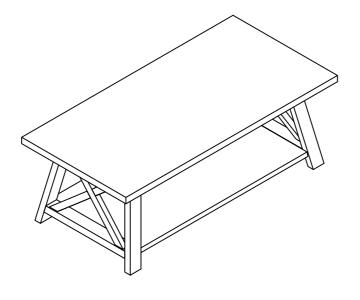

PAGE 1 OF 5


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!


ITEM#:192532 CT

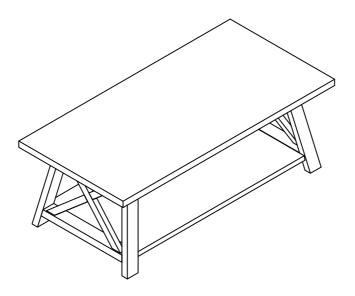

PAGE 1 OF 5

PARIS IDENIIFICATION

ITEM#:192532 CT

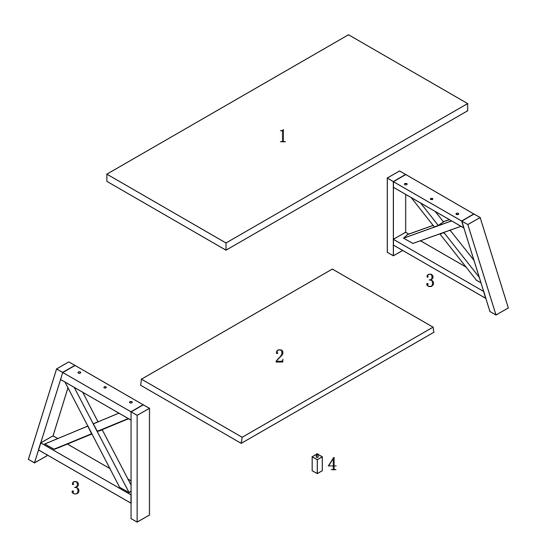

- (1) 1pc
- (2) 1pc
- (3) 2pcs
- (4) 1pc

5


HARDWARE IDENTIFICATION

ITEM#:192532 CT

| _A | | L47 | 4pcs |
|----|---|---|------|
| В | | Ø 15 | 4pcs |
| C | | Ø 8x25 | 4pcs |
| D | | ø 16 | 4pcs |
| E | | M8x40 | 4pcs |
| F | © | ø 8x ø 16x2 | 4pcs |
| G | | M5 | 1pc |
| H | | Glue: For securing please apply to wood dowel first before inserting into panel | 1pc |


PAGE:3 OF 5

ITEM#:192532 CT

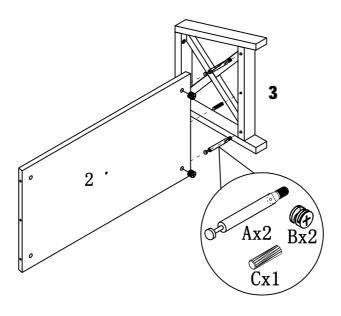


STEP1

STEP2

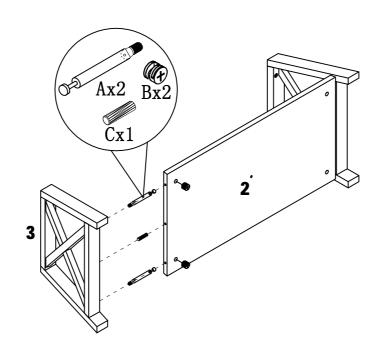


PAGE:4 OF 5

ITEM#:192532 CT

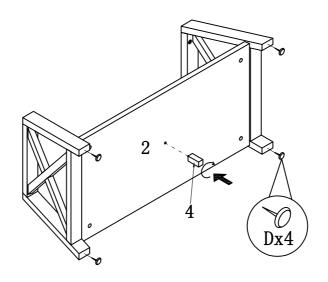

STEP3

STEP4

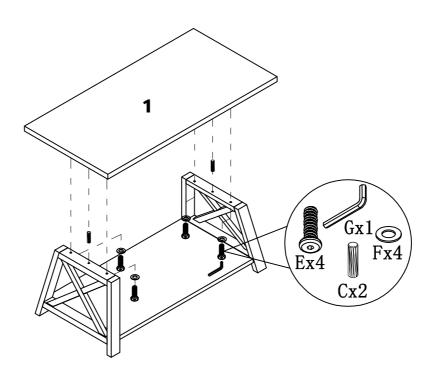

PAGE:5 OF 5