PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.


Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!

ITEM#:192641

Need some help? Scan here for assembly video.




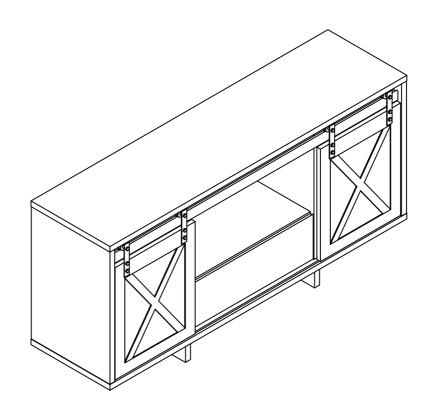

VERSION: 20200519 PAGE 1 OF 11

PARTS IDENTIFICATION

ITEM#:192641

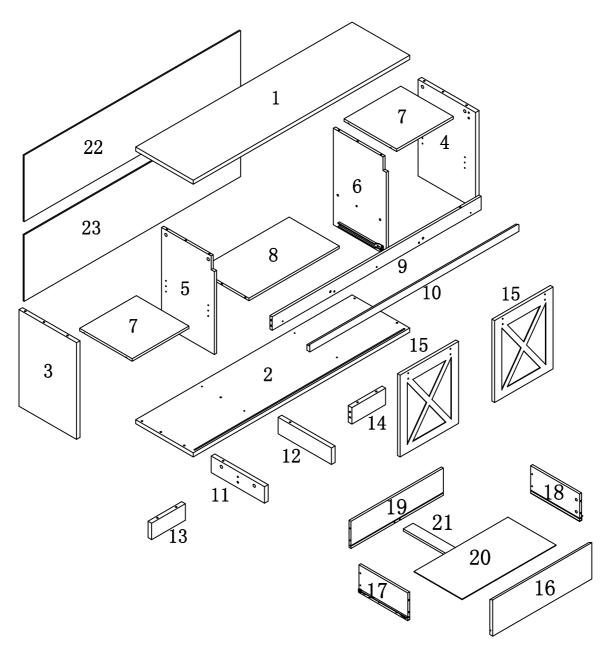

(1)	1pc	(9)	1pc	(17)	1pc
(2)	1pc	(10)	1pc	(18)	1pc
(3)	1pc	(11)	1pc	(19)	1pc
(4)	1pc	(12)	1pc	(20)	1pc
(5)	1pc	(13)	1pc	(21)	1pc
(6)	1pc	(14)	1pc	(22)	1pc
(7)	2pcs	(15)	2pcs	(23)	1pc
(8)	1pc	(16)	1pc		

PAGE:2 OF 11


HARDWARE IDENTIFICATION


ITEM#:192641

Ā		 Φ15	 25pcs
B		L29	 25pcs
\bar{C}		Φ8x25	 18pcs
D		Ф12	4pcs
E		L20	4pcs
<u>-</u>		Ф6х30	6pcs
<u>-</u>		Φ5x15	8pcs
I		M6x25	8pcs
J		M6	8pcs
\overline{K}	6	Ф16	6pcs
L		M10	2pcs
M = M	**************************************	Φ4x30	9pcs
$oxed{N}$	*)mmm>	Ф4х40	6pcs
P			45pcs
Q	<u> </u>	TMJ9	4pcs
R		φ7 x 48	4pcs
S	0	Ø 8X Ø 16X2	4pcs
T		197x5x1	1pcs
Ū	Channe	$ \overline{\Phi}$ $\overline{8}$ x $\overline{40}$	lpcs
V			
W			1pc
X	Smm	$\Phi 4\mathrm{x}25$	
Y		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

PAGE:3 OF 11


ITEM#:192641

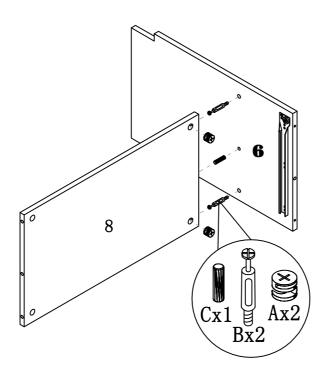

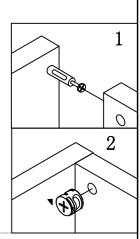


STEP1

STEP2

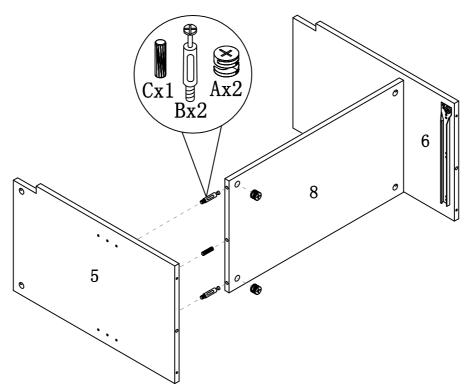


PAGE:4 OF 11

ITEM#:192641

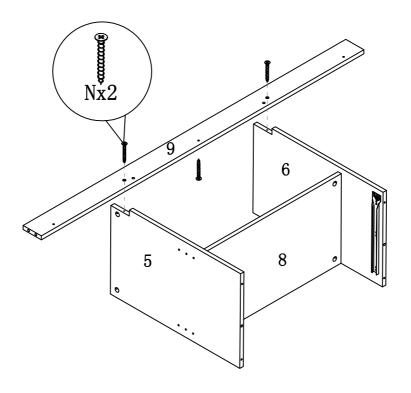


STEP3

STEP4

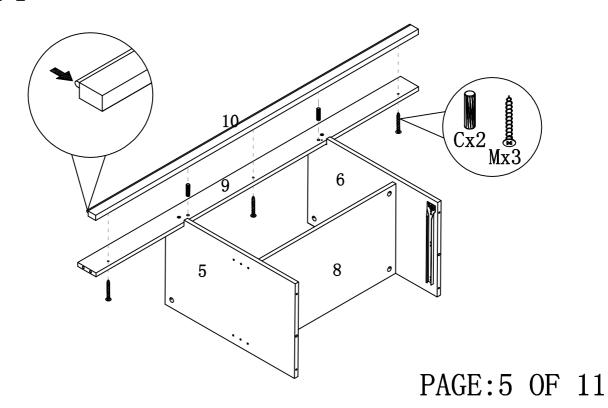


ITEM#:192641

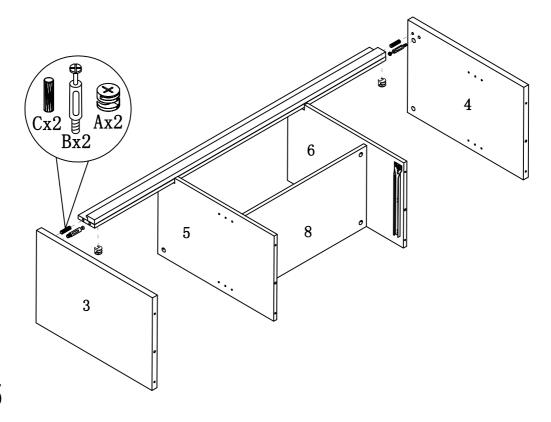


STEP5

STEP6

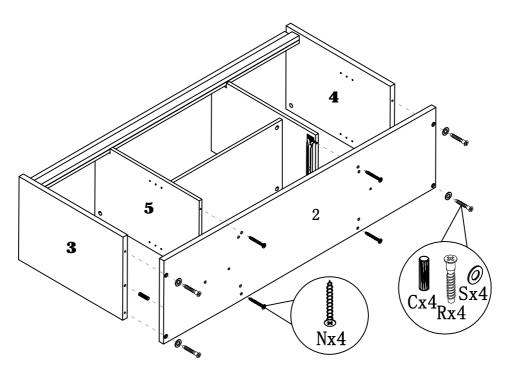


PAGE:6 OF 11

ITEM#:192641

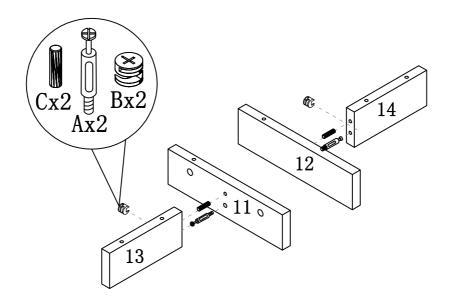


STEP7

STEP8

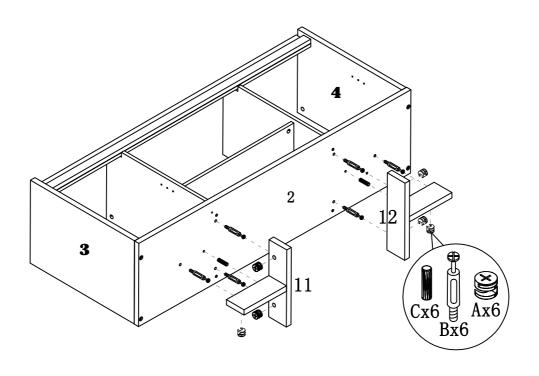


PAGE:7 OF 11

ITEM#:192641

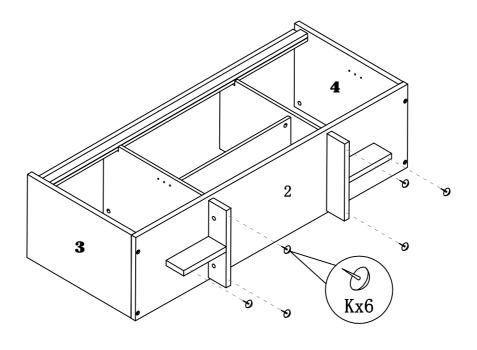


STEP9

STEP10

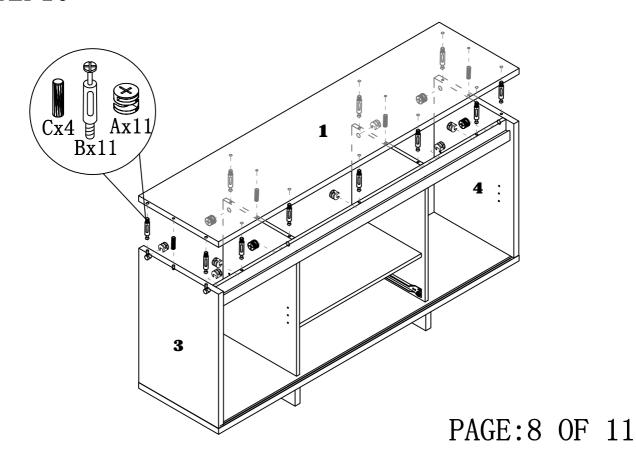


ITEM#:192641

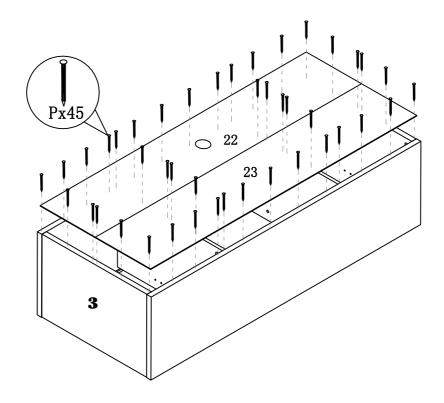


STEP11

STEP12

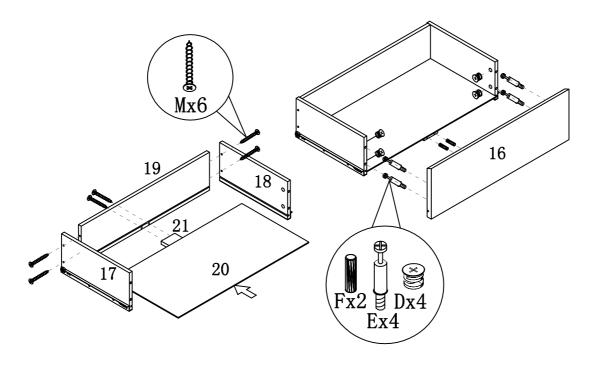


PAGE:9 OF 11

ITEM#:192641

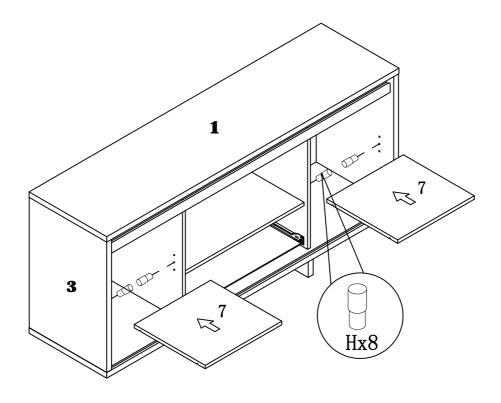


STEP13

STEP14

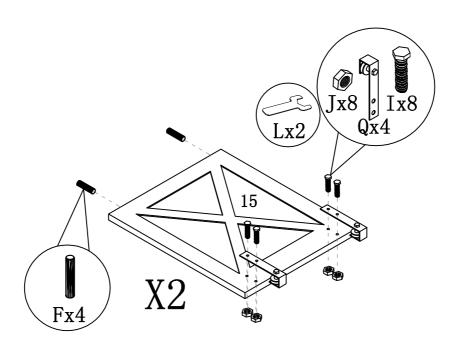


PAGE:10 OF 11

ITEM#:192641

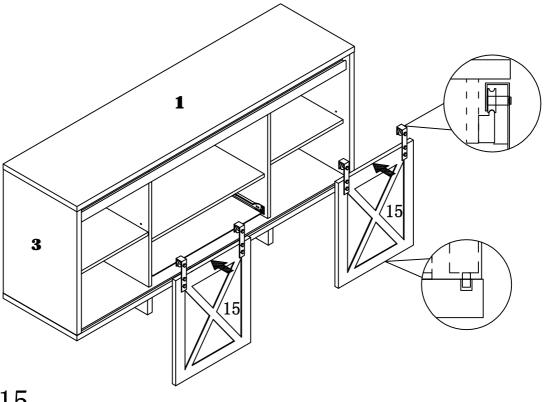

STEP15

STEP16

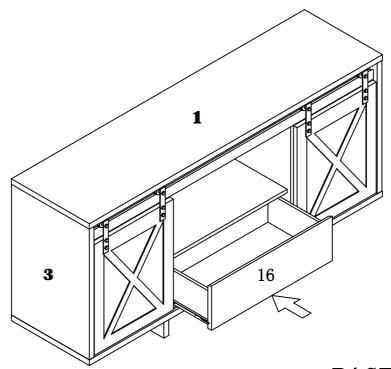

PAGE:11 OF 11