
ITEM#:212884TV

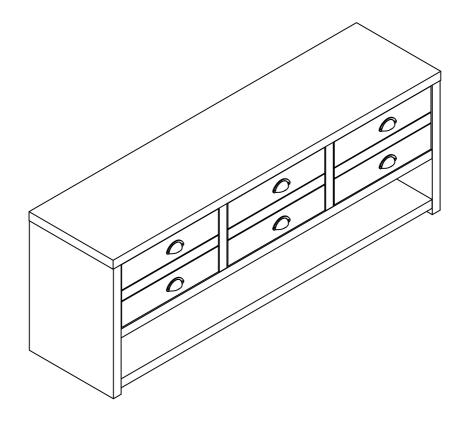

VERSION: 20210809 PAGE 1 OF 9


#### PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Note position of all holeson each panel during assembly.


ITEM#:212884TV

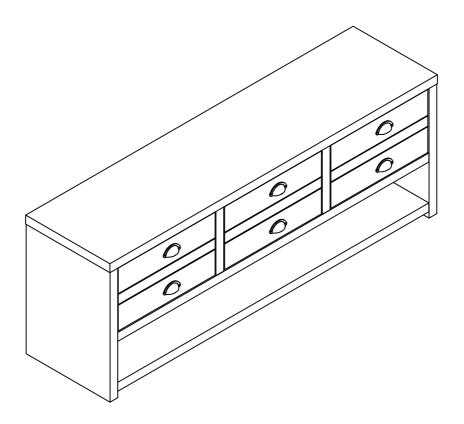

VERSION: 20210809 PAGE 1 OF 9

# PARTS IDENTIFICATION

ITEM#:212884TV

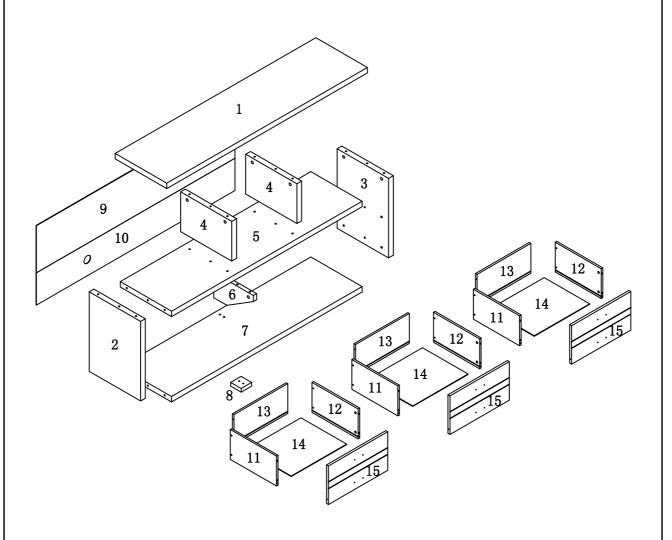

(1)	1pc	(6)	1pc	(11)	3pcs
(2)	1pc	(7)	1pc	(12)	3pcs
(3)	1pc	(8)	1pc	(13)	3pcs
(4)	2pcs	(9)	1pc	(14)	3pcs
(5)	1pc	(10)	1pc	(15)	3pcs


PAGE 2 OF 9


#### HARDWARE IDENTIFICATION

#### ITEM#:212884TV

-A		L29	18pcs
$\bar{B}$		ø15	18pcs
$\bar{C}$		L20	12pcs
$\bar{D}$			12pcs
$\bar{E}^{-}$		$\emptyset 8x25$	12pcs
$\bar{F}$	(a))))))	- $        -$	12pcs
$\bar{G}$	(a) (b) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	12pcs
$-\overline{\mathrm{H}}$	(a) (b) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	$2 \mathrm{pcs}$
$ar{f I}$	()====================================		28pcs
$\mathbf{J}^{-1}$		$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	$^{-}$ $^{-}$ $^{-}$ $^{-}$ $^{-}$ $^{-}$ $^{-}$
-K		=	4pcs
$\Gamma$		- $   0.00$	5pcs
-M		0.000 $0.000$ $0.000$ $0.000$ $0.000$ $0.000$	5pcs
$\bar{N}$			6pcs


ITEM#:212884TV

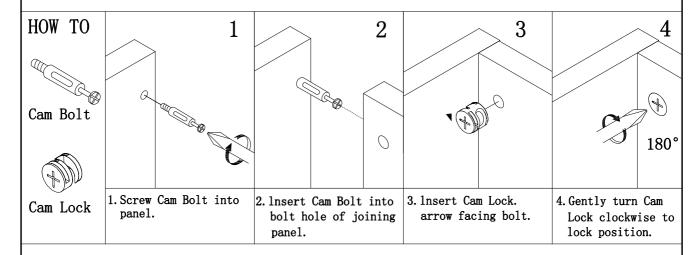

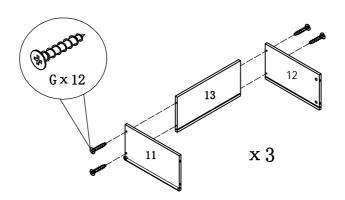


#### STEP1

#### STEP2

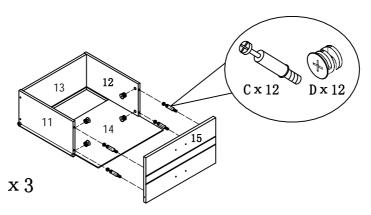


PAGE 4 OF 9

ITEM#:212884TV

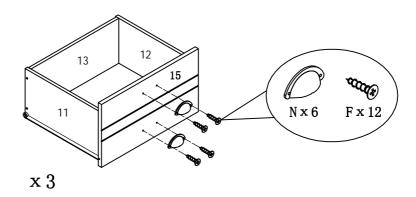


#### STEP3

#### STEP4

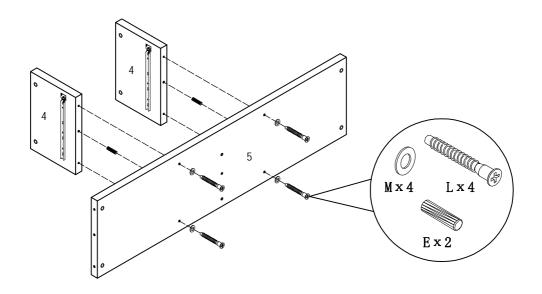


PAGE 5 OF 9

ITEM#:212884TV

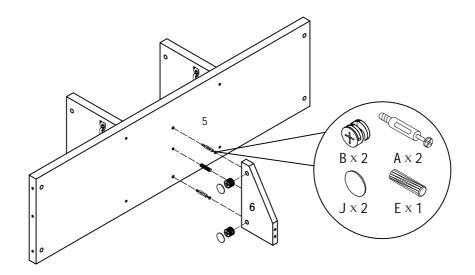


STEP5

STEP6

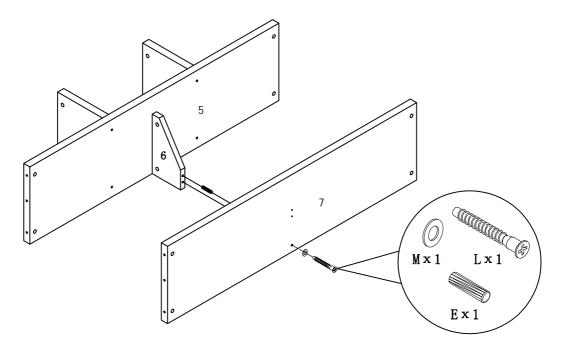


PAGE 6 OF 9

ITEM#:212884TV

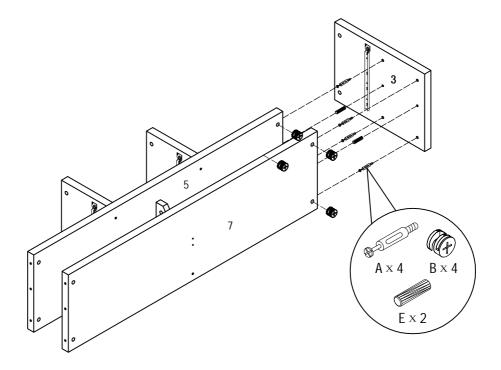


STEP7

#### STEP8

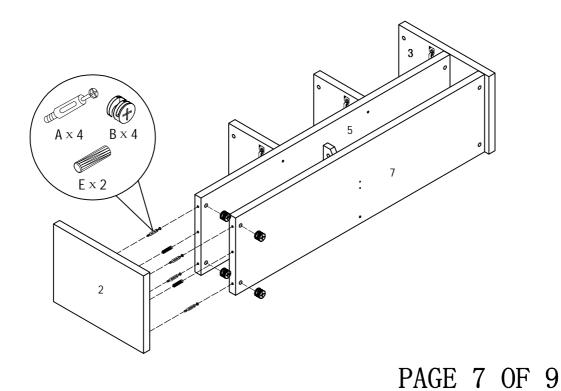


ITEM#:212884TV

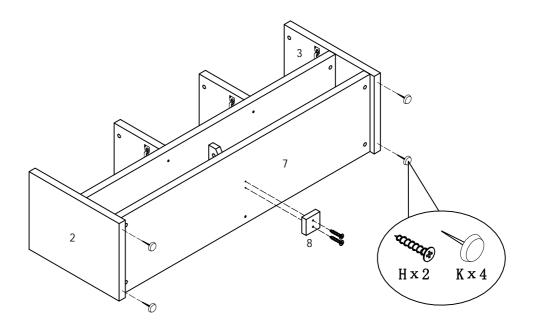


STEP9

#### STEP10

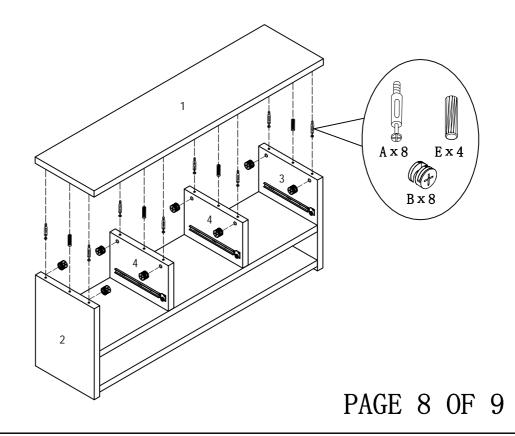



ITEM#:212884TV

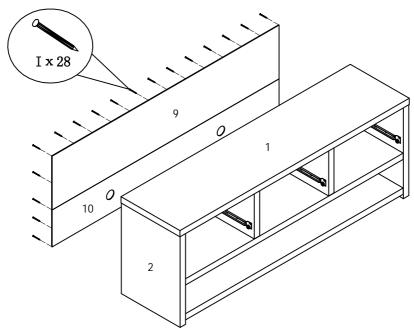

STEP11

STEP12

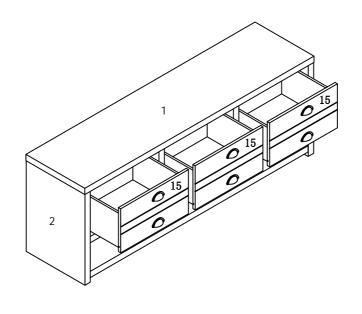

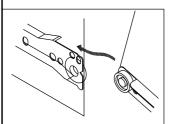

PAGE 9 OF 9